



ROYDEN KITCHEN FAUCET INSTALLATION

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, sink, counter top, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

TOOLS AND MATERIALS:



Plumbers
Tape



Thread
Sealant



Phillips
Screwdriver



Adjustable
Wrench



Small
Bucket




ROYDEN KITCHEN FAUCET INSTALLATION


INSTALLATION

1. Ensure that the water supply below your sink is shut off.


Tip: Place a small bucket below your workspace to catch any water that may drip during the installation process.

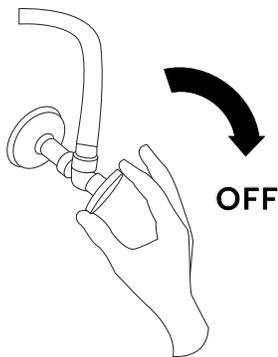


2. Remove the lock nut, metal washer, and rubber washer from the faucet shank.

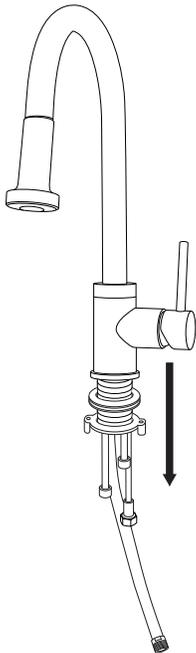

3. If not already attached, attach the provided braided water lines to the faucet. Apply plumber's tape or thread sealant to the threads before tightening. Hand tighten the connections, then finish tightening with an adjustable wrench. Be very careful not to overtighten.

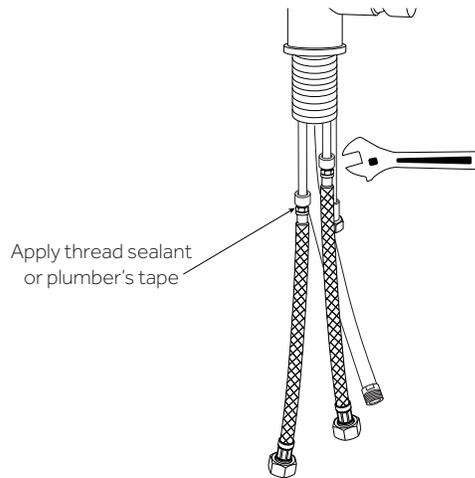


4. Insert the faucet into its mounting hole. From beneath the counter, slide the rubber washer back onto the faucet body followed by the metal washer. Thread the locknut back onto the faucet body until hand tight. Finish securing the faucet by tightening the two screws attached to the lock nut with a Phillip's screwdriver.

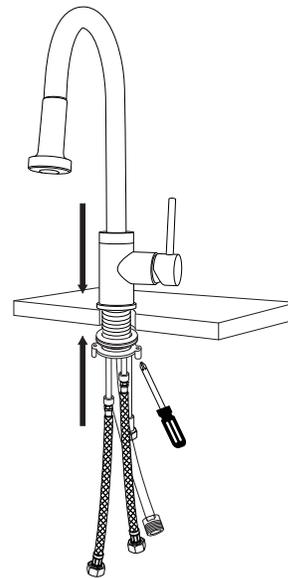




ROYDEN KITCHEN FAUCET INSTALLATION

5. Attach the faucet's supply line to the main water supply. Apply plumber's tape or thread sealant to the threads before tightening. Hand tighten the connections, then finish tightening with an adjustable wrench. Be very careful not to overtighten.

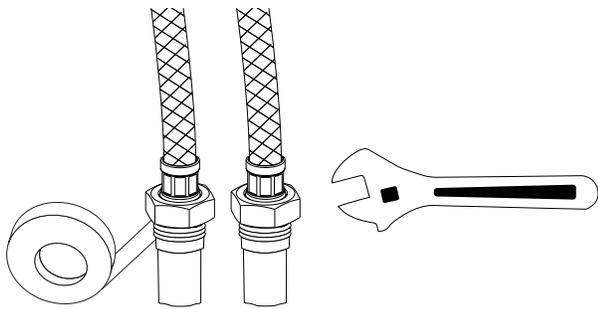

6. Insert the provided rubber O-ring into the hand sprayer's copper water line. Connect the hose for the hand sprayer to the copper line. Apply plumber's tape or thread sealant to the threads before tightening. Hand tighten the connections, then finish tightening with an adjustable wrench. Be very careful not to overtighten. Then, attach the provided weight to the nylon hose where the hose bends, as shown.

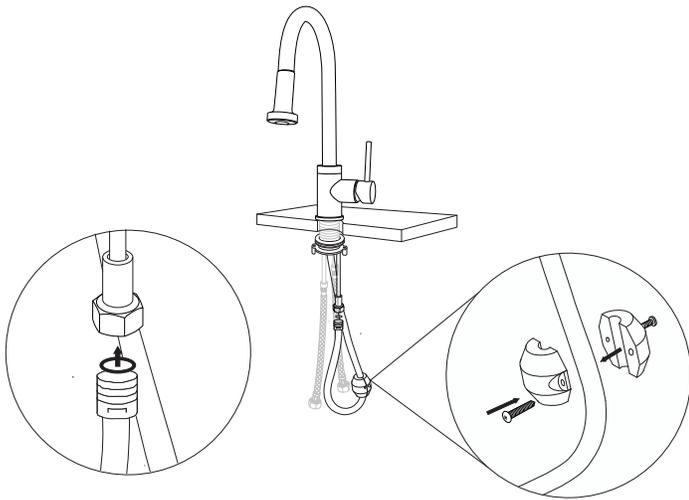

7. Once installation is complete, turn the main water supply back on from underneath your sink. Check for any leaks underneath.



8. Remove the aerator from the faucet, and turn the faucet on for approximately 60 seconds to remove any dust or loose sediment within the water lines. Check for any leaks. Ensure that both hot and cold water are functioning properly. Reattach the sprayer nozzle and divert the water to the sprayer to ensure functionality.

