



TILTING BATHROOM MIRROR

BEFORE INSTALLING

Read entire installation instructions. Observe all local building and safety codes.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-866-855-2284. If you need assistance or have questions while installing your mirror, contact Customer Service.

Because wall construction and materials vary from home to home, the appropriate mounting hardware may need to be purchased from your local hardware store.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the floor, walls or for personal injury during installation.

TOOLS AND MATERIALS:



Screwdriver



Tape Measure



Level



Drill




Pencil




Stud Finder

INSTALLATION

1. With the help of another person, center the mirror above the sink at the appropriate height and mark a line at the top of the mirror on the wall.

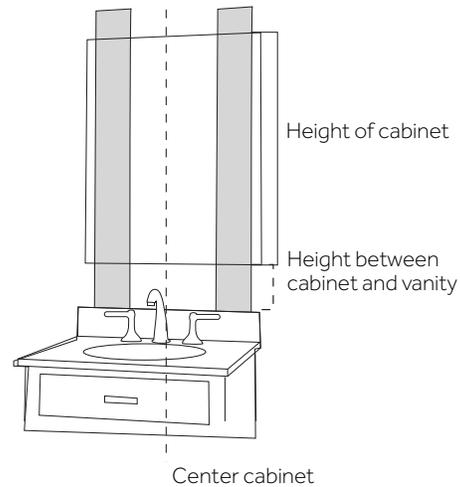

2. Locate and mark the position of the wall studs to which you will fasten your mirror. You can find studs by listening for a solid sound as you knock on the wall or by using a stud finder.

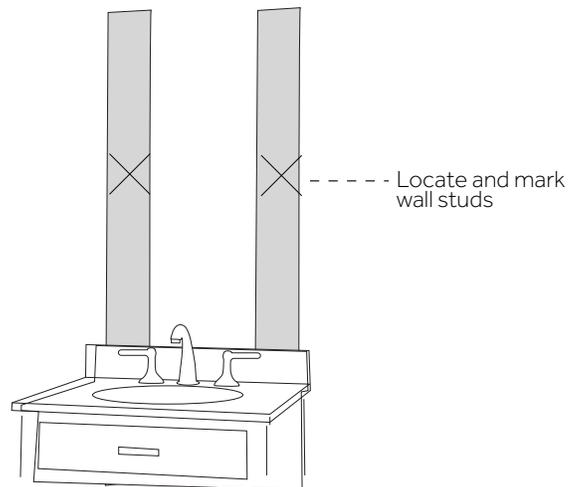


Tip: If the studs in your bathroom do not line up to the mounting location for your mirror, wood blocking can be installed between the studs using standard 2 x 4's. We recommend consulting a professional if you are unfamiliar with this type of installation.




3. If not already attached, adhere the included nylon pads to the inside of the decorative brackets (opposite the set screws). These prevent the mirror from sliding out of place.

Important: Do not hang the mirror without nylon pads installed. Doing so will void the mirror's warranty.

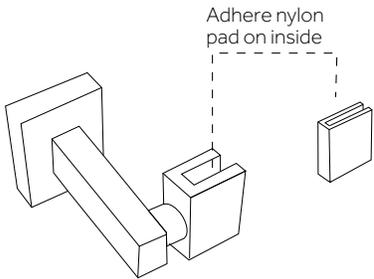


4. Place the decorative brackets on your mirror and secure by tightening the set screws with your Allen wrench (provided) or screwdriver. Use your tape measure and level to verify that the two brackets are properly aligned.

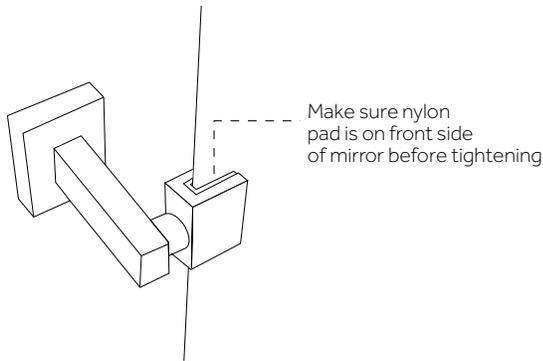

5. Measure the distance between the centerlines of the two mounting brackets on the mirror to determine the location of your mounting hardware. Use the top of the mirror as your guideline, again using your level to verify that the mounting hardware are properly aligned.

6. Drill pilot holes and attach the mounting brackets to the wall with the mounting hardware. Use your level and tape measure to ensure your brackets are perfectly straight and in the proper position.

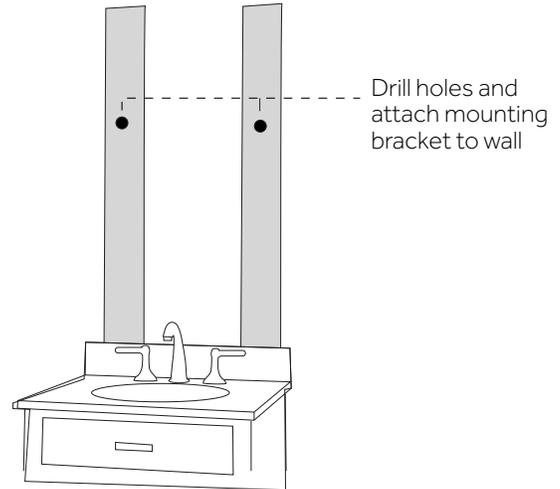

7. With the help of another person place the mirror on the mounting brackets. Tighten the set screws on the underside of the brackets with your Allen wrench (provided) or screwdriver to secure.

Important: Do not hang objects, such as towels, from the installed mirror.

